

# INVOLIGHT

## LFM3000DMX POWER LOW FOG MACHINE

### USER MANUAL

Please read over this manual before operation the machine ©

Thank you for choosing 3000w terra fog machine. Please read over this manual before operation the light C E.

**Characteristics:**

1. Terra smog machine let the smog out of the spray through the ice, cool the smog and increase the weight, make the smog raise from the floor gradually to create a special effect.
2. Remote line control (10M)
3. DMX signal control

**Information:**

Heat up time: 10mins

DMX512 signal、 Remote Control、 time and ration controller

30%output continues long as 1 hour

Voltage: AC 110v-130v,220-250v 50-60Hz

Heater: 3000W

Output: 100m<sup>2</sup>

Oil smoke capacity: 5.5L

size: 76×41×38cm

weight: 25KG

**Attention:**

1. Use indoor
2. Stop the machine if no adult is with it. Children can't touch.
3. Please use the high quality fog liquid recommended by distributors. Bad quality fog liquid may get blast or spray oil.
4. Don't spray it to people directly
5. If there has no fog liquid in machine, stop the machine, otherwise the oil will heat and damage some parts of the machine.
6. There is some noise during operation, it is usual.

**Operation:**

1. When you get the new machine, take away the package, check the machine carefully to make sure if the machine is damaged or lack of

some parts, then turn to the distributor.

2. Add high quality fog liquid in the machine.

3. Use the standard five-corn-line to connect the control box and the machine.

4. Connect the power line to the power socket with earth line. Turn the switch at "On". The red LED of line console will light

5. When the green light of the manual control is on, the machine finish heat, and is ready to spray smog. Press the "manual" button, the machine will give out smog, when the red LED light, the machine is heating.

6. Press "continuous", you can use the "output volume" on the control box to adjust the smog quantity

7. Press the "timers" use the "duration" to adjust the duration of the smog (1-60s), use "interval" to adjust the time interval (1-180s)

8. DMX signal must use the LIN digital line to set the DMX signal receiving address. Press UP (+), DOWN (-), ENTER, (only one passage date allowed A001); the output can be controlled by DMX signal.

**Repair:**

1. After about 40 hours continually use, please use a little watery meiotic acid to clean the inner pipe.
2. Change the smog oil if use it after a long time from last use
3. If the fog is small, plum has noise or there has no fog, please power off and check fog liquid, fuse, the connector of remote console and power plug. If the problem could not be solved after check these parts, please stop check and send it back to distributor for repair.

**List of the package**

- |                        |         |
|------------------------|---------|
| 1. Terra smog machine. | 1 paces |
| 2. Control box         | 1pcs    |
| 3. Instruction paper   | 1pcs    |